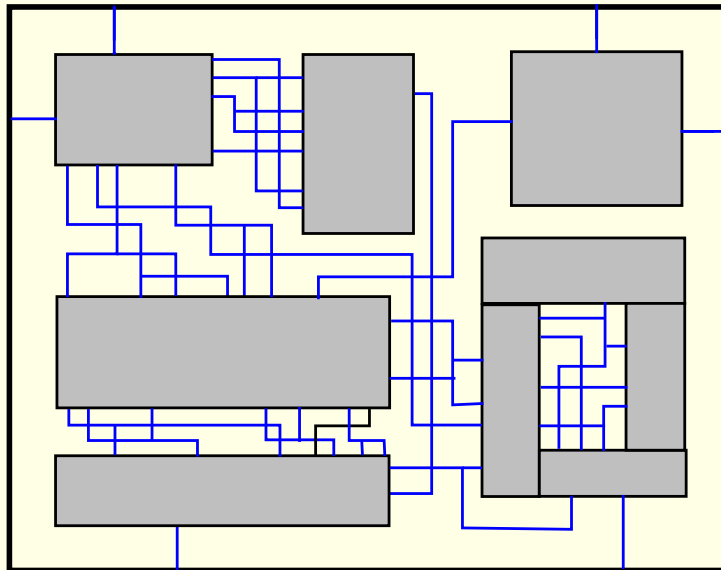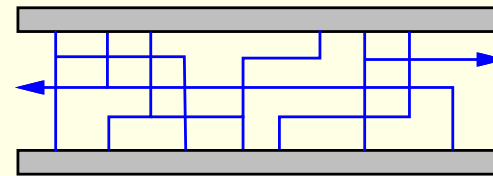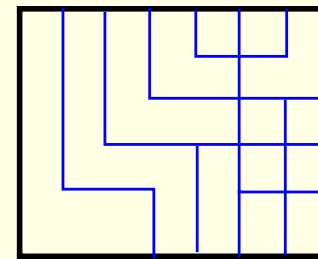# Channel & Switchbox Routing

Detailed routing

channel routing
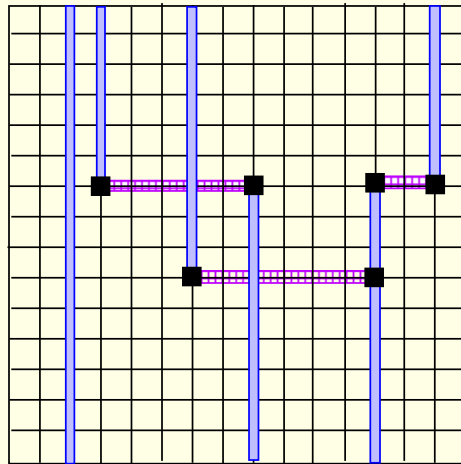
switchbox routing

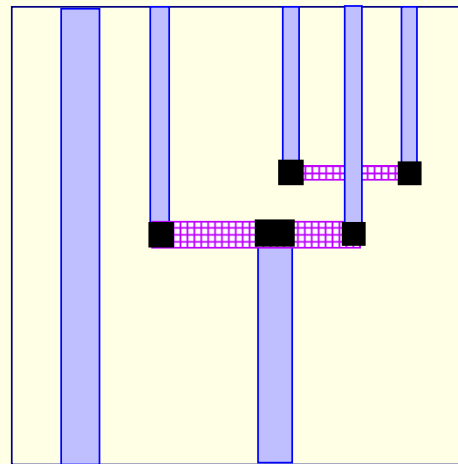# Routing Models

- **Grid-based model:**
  - A grid is super-imposed on the routing region.
  - Wires follow paths along the grid lines.

- **Gridless model:**
  - Any model that does not follow this "gridded" approach.
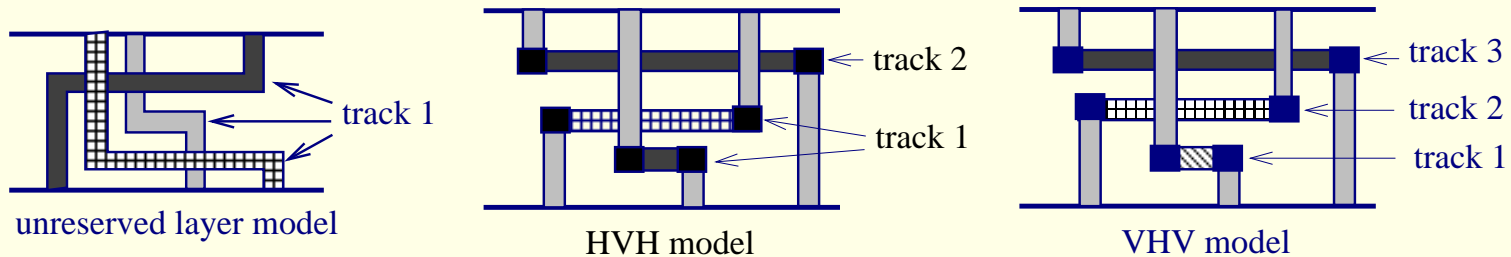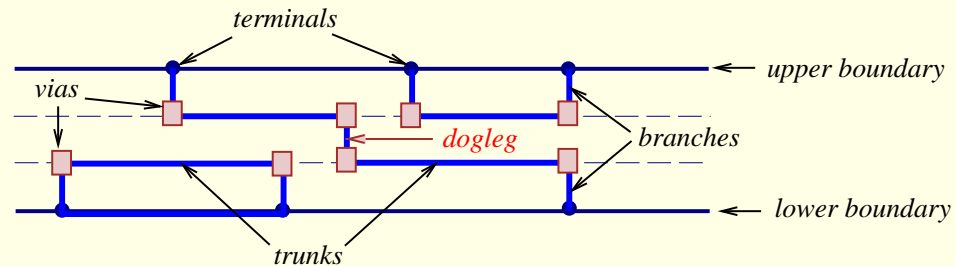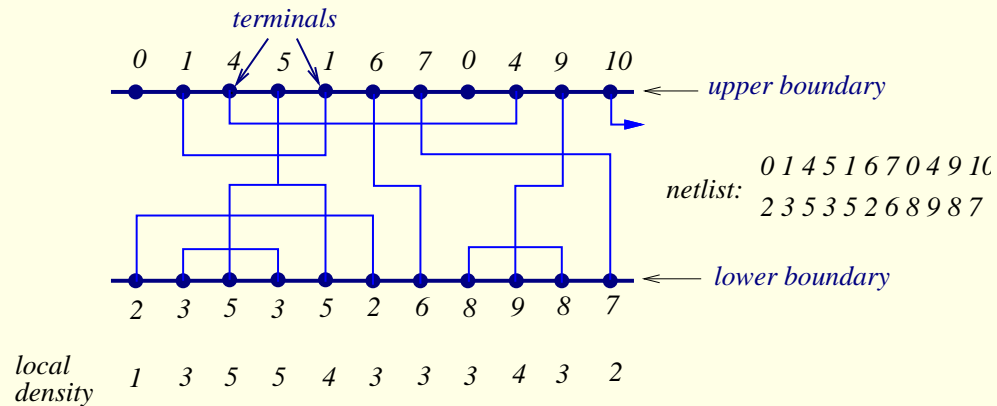

grid–based   gridless

Models for Multi-Layer Routing

- **Unreserved layer model:** Any net segment is allowed to be placed in any layer.

- **Reserved layer model:** Certain type of segments are restricted to particular layer(s).

  - Two-layer: HV (horizontal-Vertical), VH

  - Three-layer: HVH, VHV

unreserved layer model

HVH model

VHV model

3 types of 3−layer models

Terminology for Channel Routing Problems

terminals

0   1   4   5   1   6   7   0   4   9   10

← *upper boundary*

netlist: 0 1 4 5 1 6 7 0 4 9 10
2 3 5 3 5 2 6 8 9 8 7

← *lower boundary*

2   3   5   3   5   2   6   8   9   8   7

local density   1   3   5   5   4   3   3   3   4   3   2

terminals — *upper boundary*
vias
*dogleg* — *branches*
trunks — *lower boundary*

- Local density at column i: total # of nets that crosses column i.

- Channel density: maximum local density; # of horizontal tracks required $\geq$ channel density.

4

Channel Routing Problem

- **Assignments of horizontal segments of nets to tracks.**

- **Assignments of vertical segments to connect.**
  - horizontal segments of the same net in different tracks, and
  - the terminals of the net to horizontal segments of the net.

- **Horizontal and vertical constraints must not be violated.**
  - Horizontal constraints between two nets: The horizontal span of two nets overlaps each other.
  - Vertical constraints between two nets: There exists a column such that the terminal on top of the column belongs to one net and the terminal on bottom of the column belongs to the other net.

- **Objective: Channel height is minimized** (i.e., channel area is minimized).

Horizontal Constraint Graph (HCG)

- HCG $G = (V, E)$ is **undirected** graph where
  - $V = \{v_i | v_i$ represents a net $n_i\}$
  - $E = \{(v_i, v_j) |$ a horizontal constraint exists between n_i and $n_j\}$.

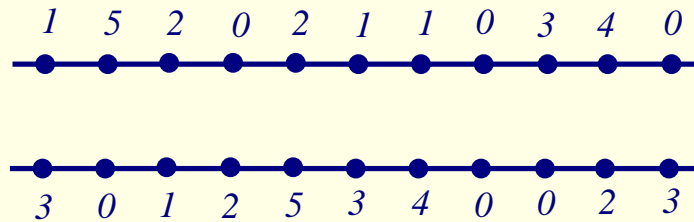- For graph G: vertices $\Leftrightarrow$ nets; edge $(i, j) \Leftrightarrow$ net i overlaps net j.
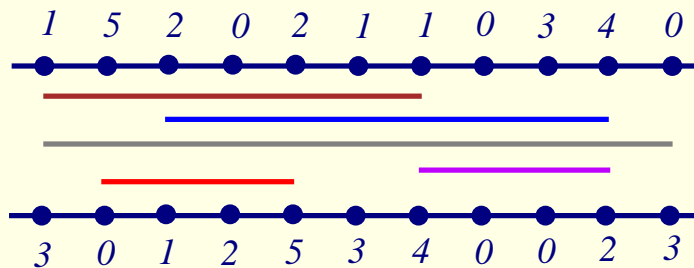
A routing problem and its HCG.
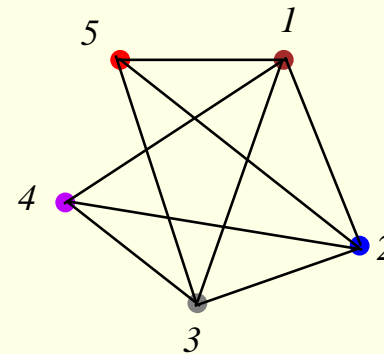
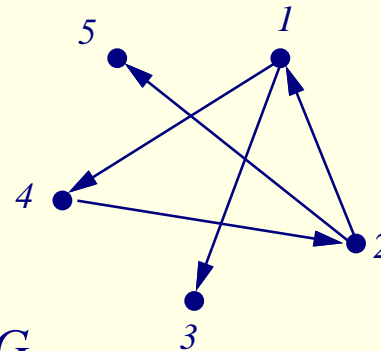# Vertical Constraint Graph (VCG)

- VCG $G = (V, E)$ is **directed** graph where
  - $V = \{v_i | v_i$ represents a net $n_i\}$
  - $E = \{(v_i, v_j)|$ a vertical constraint exists between n_i and $n_j\}$.

- For graph G: vertices $\Leftrightarrow$ nets; edge $i \rightarrow j \Leftrightarrow$ net i must be above net j.

A routing problem and its VCG.

2-L Channel Routing: Basic Left-Edge Algorithm

- Hashimoto & Stevens, "Wire routing by optimizing channel assignment within large apertures," DAC-71.

- **No vertical constraint.**

- HV-layer model is used.

- **Doglegs are not allowed.**

- Treat each net as an interval.

- Intervals are sorted according to their left-end x-coordinates.

- Intervals (nets) are routed one-by-one according to the order.

- For a net, tracks are scanned from top to bottom, and the first track that can accommodate the net is assigned to the net.

- Optimality: produces a routing solution with the minimum # of tracks (if no vertical constraint).

Basic Left-Edge Algorithm

Algorithm: Basic_Left-Edge($U, track[j]$**)**
U: set of unassigned intervals (nets) $I_1, \ldots, I_n$;
$I_j = [s_j, e_j]$: interval j with left-end x-coordinate s_j and right-end e_j;
$track[j]$: track to which net j is assigned.

1 **begin**
2 $U \leftarrow \{I_1, I_2, \ldots, I_n\}$;
3 $t \leftarrow 0$;
4 **while** $(U \neq \emptyset)$ **do**
5 $t \leftarrow t + 1$;
6 $watermark \leftarrow 0$;
7 **while** (there is an $I_j \in U$ s.t. $s_j > watermark$) **do**
8   Pick the interval $I_j \in U$ with $s_j > watermark$,
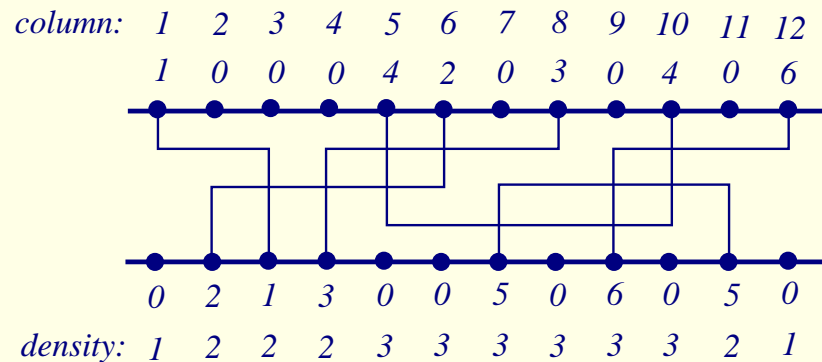   nearest $watermark$;
9    $track[j] \leftarrow t$;
10    $watermark \leftarrow e_j$;
11    $U \leftarrow U - \{I_j\}$;
12 **end**

Basic Left-Edge Example

- $U = \{I_1, I_2, \ldots, I_6\}$; $I_1 = [1, 3]$, $I_2 = [2, 6]$, $I_3 = [4, 8]$, $I_4 = [5, 10]$, $I_5 = [7, 11]$, $I_6 = [9, 12]$.

- $t = 1$:
    - Route I_1: $watermark = 3$;
    - Route I_3: $watermark = 8$;
    - Route I_6: $watermark = 12$;

- $t = 2$:
    - Route I_2: $watermark = 6$;
    - Route I_5: $watermark = 11$;

- $t = 3$: Route I_4

column:	1	2	3	4	5	6	7	8	9	10	11	12
	1	0	0	0	4	2	0	3	0	4	0	6
	0	2	1	3	0	0	5	0	6	0	5	0
density:	1	2	2	2	3	3	3	3	3	3	2	1

Constrained Left-Edge Algorithm

Algorithm: Constrained_Left-Edge($U, track[j]$)
U: set of unassigned intervals (nets) $I_1, \ldots, I_n$;
$I_j = [s_j, e_j]$:   interval j with left-end x-coordinate s_j and right-end e_j;
$track[j]$:   track to which net j is assigned.

1 **begin**
2 $U \leftarrow \{I_1, I_2, \ldots, I_n\}$;
3 $t \leftarrow 0$;
4 **while** $(U \neq \emptyset)$ **do**
5   $t \leftarrow t + 1$;
6   $watermark \leftarrow 0$;
7   **while** (there is an **unconstrained** $I_j \in U$ s.t. $s_j > watermark$) **do**
8   Pick the interval $I_j \in U$ that is unconstrained,
        with $s_j > watermark$, nearest $watermark$;
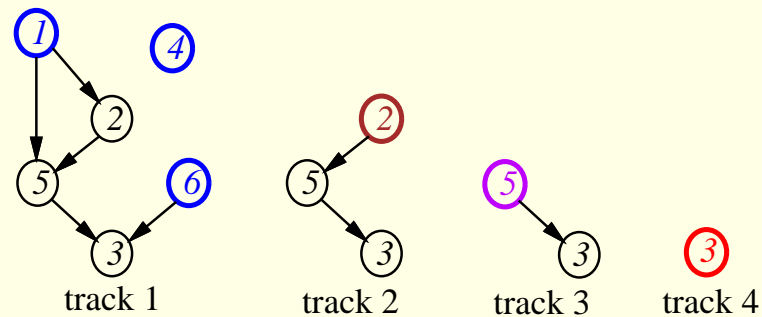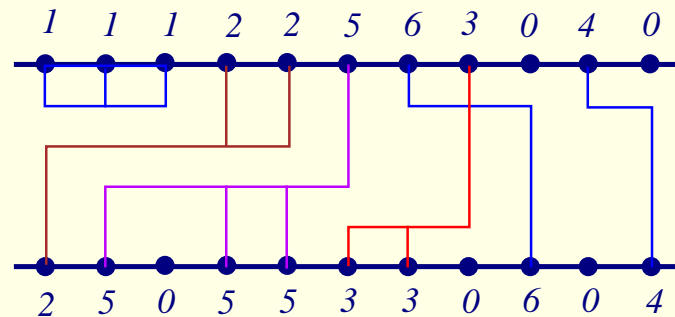9 $track[j] \leftarrow t$;
10      $watermark \leftarrow e_j$;
11 $U \leftarrow U - \{I_j\}$;
12 **end**

Constrained Left-Edge Example

- $I_1 = [1, 3]$, $I_2 = [1, 5]$, $I_3 = [6, 8]$, $I_4 = [10, 11]$, $I_5 = [2, 6]$, $I_6 = [7, 9]$.

- Track 1: Route I_1 (cannot route I_3); Route I_6; Route I_4.

- Track 2: Route I_2; cannot route I_3.

- Track 3: Route I_5.

- Track 4: Route I_3.

Dogleg Channel Router

- Deutch, "A dogleg channel router," 13rd DAC, 1976.

- **Drawback of Left-Edge: cannot handle the cases with constraint cycles.**

 - **Doglegs** are used to resolve constraint cycle.
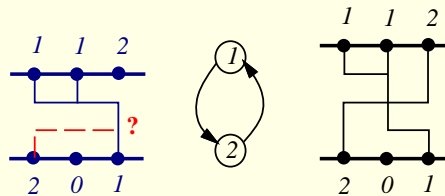
- **Drawback of Left-Edge: the entire net is on a single track.**

  - **Doglegs** are used to place parts of a net on different tracks to minimize channel height.

 - Might incur penalty for additional vias.
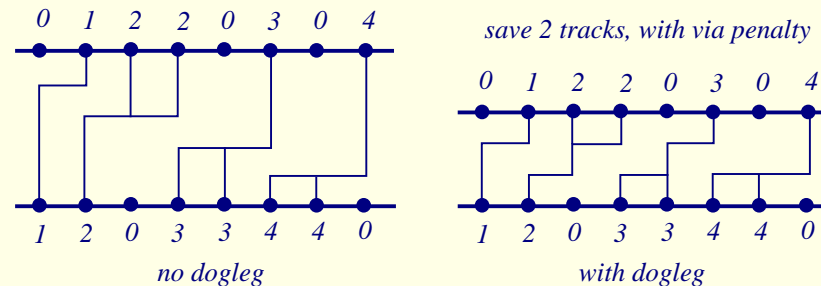
Dogleg Channel Router

- Each multi-terminal net is broken into a set of 2-terminal nets.

- Two parameters are used to control routing:

  - Range: Determine the # of consecutive 2-terminal subnets of the same net that can be placed on the same track.

  - Routing sequence: Specifies the starting position and the direction of routing along the channel.

- Modified Left-Edge Algorithm is applied to each subnet.
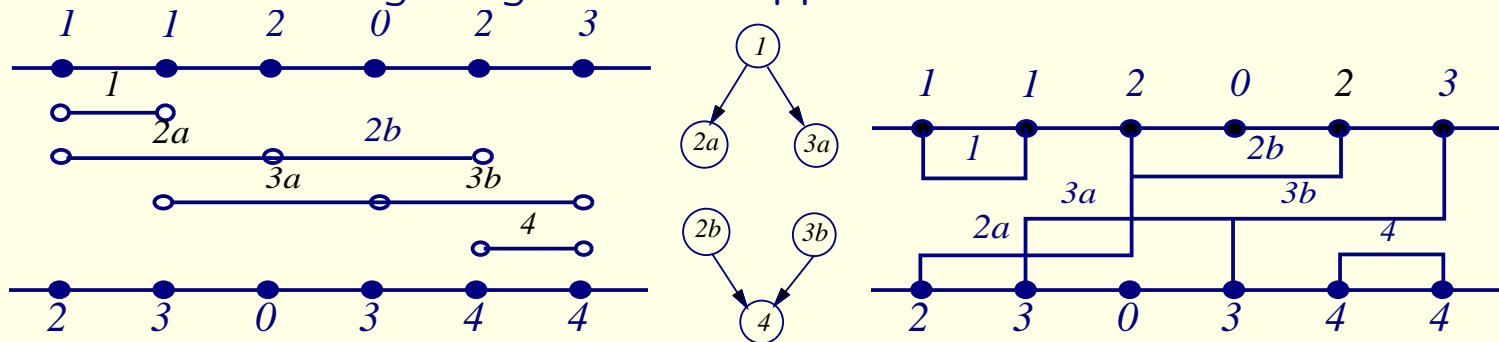
Over-the-Cell Routing

- Routing over the cell rows is possible due to the limited use of the 2nd (M2) metal layers within the cells.

- Divide the over-the-cell routing problem into 3 steps: (1) routing over the cell, (2) choosing the net segments, and (3) routing within the channel.

- Reference: Cong & Liu, "Over-the-cell channel routing," IEEE TCAD, Apr. 1990.
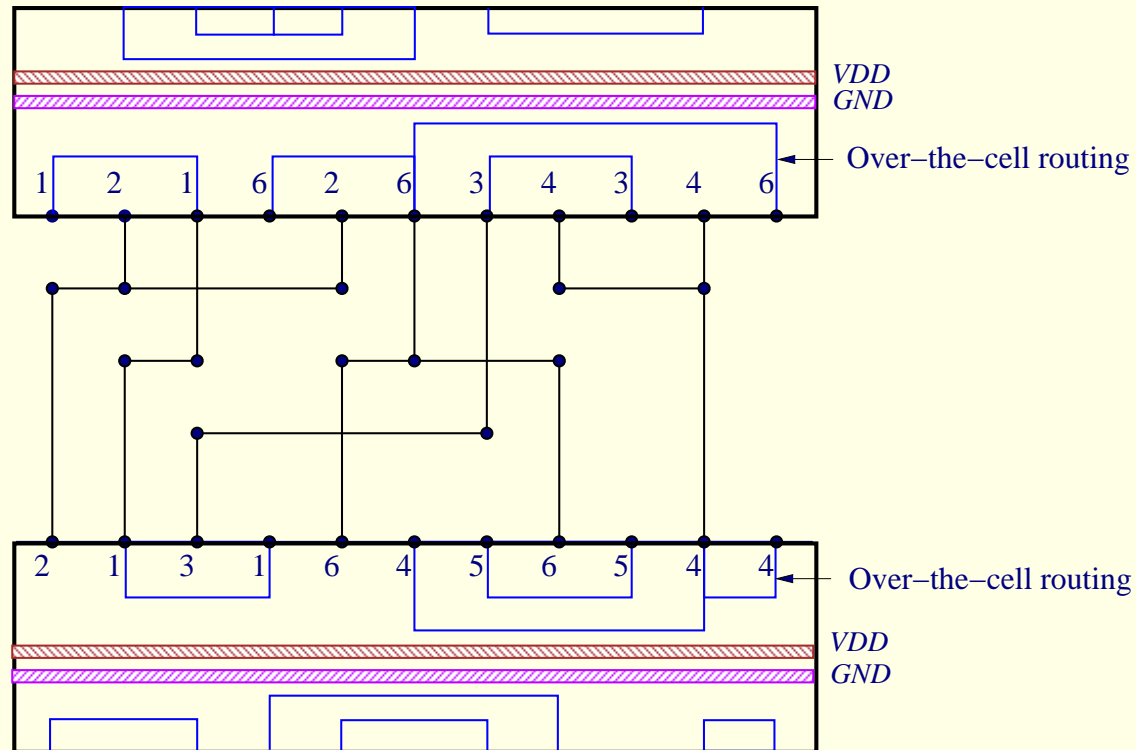
Over-the-Cell Channel Routing

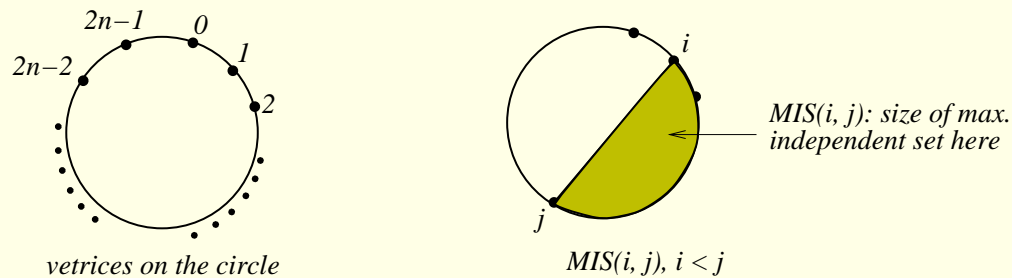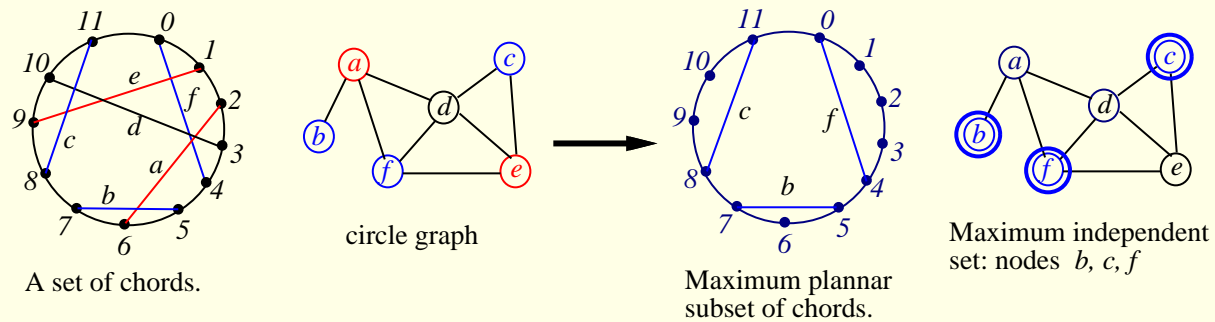- Cong & Liu, "Over-the-cell channel routing," IEEE TCAD, Apr. 1990.
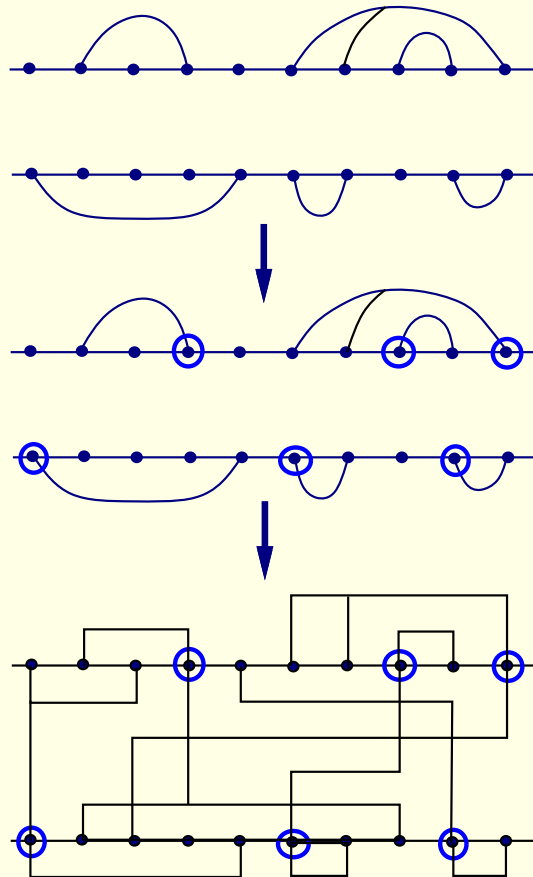
Select over–the–cell nets
use Supowit's Max. Independent
Set algorithm for circle graph
(solvable in $O(c^3)$ time,
 c: # of columns)

Select terminals among
"equivalent" ones for regular
channel routing
(Goal: minimize channel density
              NP–complete!)

Plannar routing for
over–the–cell nets
            +
Regular channel routing

Supowit's Algorithm

- Supowit, "Finding a maximum plannar subset of a set of nets in a channel," IEEE TCAD, 1987.

- Problem: Given a set of chords, find a maximum plannar subset of chords.

  - Label the vertices on the circle 0 to $2n-1$.

  - Compute $MIS(i,j)$: size of maximum independent set between vertices i and j, $i < j$.

  - Answer $= MIS(0, 2n-1)$.

A set of chords.

circle graph

Maximum plannar subset of chords.

Maximum independent set: nodes b, c, f

vetrices on the circle

$MIS(i,j), i < j$

$MIS(i,j)$: size of max. independent set here
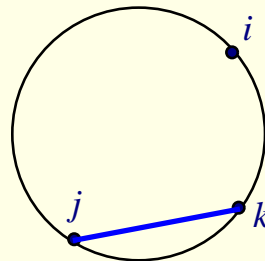
17

Dynamic Programming in Supowit's Algorithm

- Apply dynamic programming to compute $MIS(i, j)$.

case 1
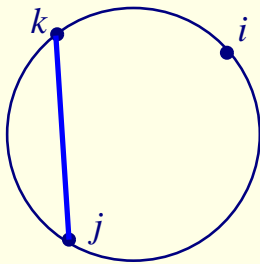
$MIS(i, j) = MIS(i, j{-}1)$

case 2

$MIS(i, j) = MIS(i, k{-}1) + 1$
$+ MIS(k{+}1, j{-}1)$

case 3

$MIS(i, j) = MIS(i{+}1, j{-}1) + 1$

$MIS(i, j{-}1)$

$MIS(i, k{-}1)$

$MIS(k{+}1, j{-}1)$

$MIS(i{+}1, j{-}1)$